
Parts List		
Item	Qty	Part Name
1	2	M10x1.25 x 60mm Flanged Hex Bolt
2	6	6mm Spacer, 11-SS-0008
3	2	Spherical Bearing Assembly
4	2	13mm Spacer, 11-SS-0009
5	4	M10x1.25 Flanged Hex Nut
6	2	M10x1.5 Jam Nut
7	2	M10x1.25 x 50mm Flanged Hex Bolt

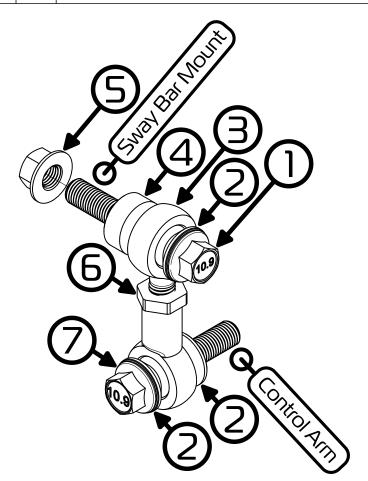

## SM-HCEG-RB-ELR

- Before removing the factory end links, notate the orientation and position of each end link.
- Adjust both spherical bearing assembly lengths to ~70mm center-to-center, with the bearings phased 90° as shown in the illustration.
- Tighten the jam nuts on each bearing assembly to 35lb/ft.
- Apply a dab of thread locker onto the M10x1.25 bolt threads.
- Assemble the end links onto the car as per the diagram.
- Torque the M10x1.25 hardware to 45lb/ft.
- Optional: Mark torqued hardware with sharpie or paint marker.
- After ~100 road miles, inspect the hardware to make sure nothing came lose and there is no binding.
- Periodically lubricate and inspect the bearings (about once every oil change).
- A dry PTFE lubricant (or similar) is recommended.